



## 1 CUT & WEED

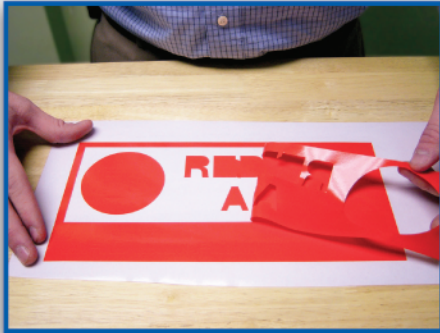

CUT the vinyl using your plotter. WEED, or remove the excess vinyl, starting from the outside working toward the inside. Use the weeding tool to remove any lettering or small pieces.

## 2 TRANSFER

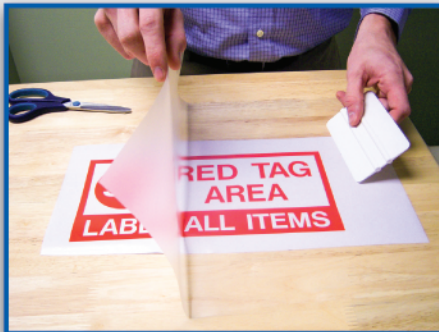

Apply Application Tape over the entire vinyl surface. Use the squeegee to press the Application Tape onto the vinyl. Now you are ready to TRANSFER the vinyl onto the signboard.

## 3 APPLY TO SIGNBOARD



Remove the paper backing and apply the vinyl to the signboard using the squeegee.

## 4 COMPLETED SIGN



Remove the Application Tape and your sign is complete.